
pawport
The smart, secure pet door.

Tunnel Flap

What's included:

1. Mounting bracket/flap assembly
2. Adapter plate
3. M3 x 6 mm screws ×3
4. #8 self tapping screws

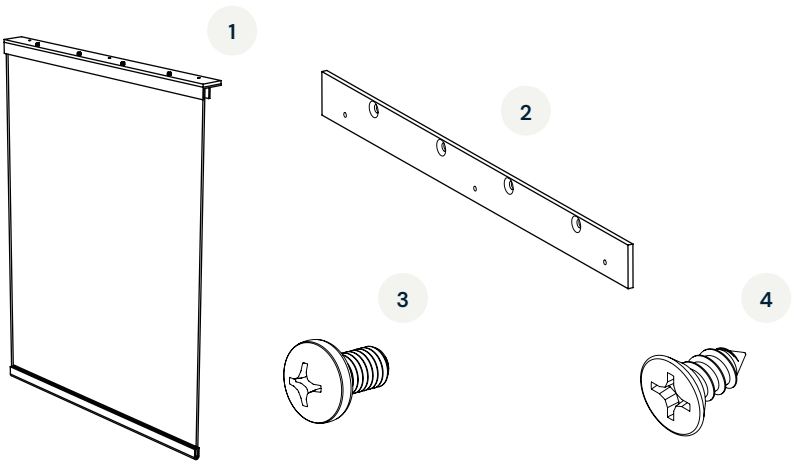

IMPORTANT!

Check your tunnel before installation


If your Pawport Tunnel & Frame System does not have four pre-drilled holes near the front of the tunnel ceiling, scan the QR code below to view the instructional video.

Hate to read?

We feel you! Scan the code to view the instructional video and follow along.


Step 1

Locate the four pre-drilled holes on the cieling of your tunnel, towards the outer edge of the tunnel.

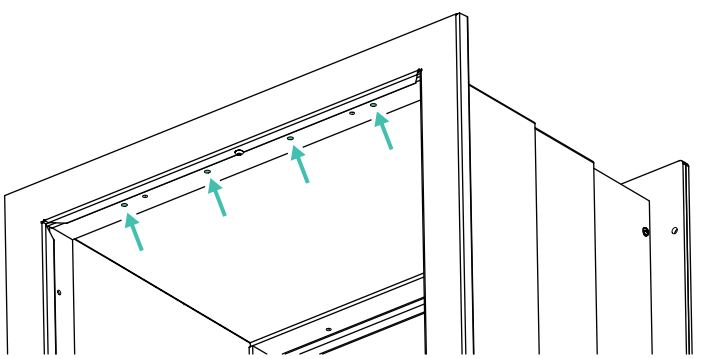


Step 2

Using the #8 self tapping screws (item 4), secure the adapter plate (item 2) to the ceiling through the pre-drilled holes with a Phillips head screwdriver, as shown. Screws should enter the side of the mounting plate where the holes are countersunk.

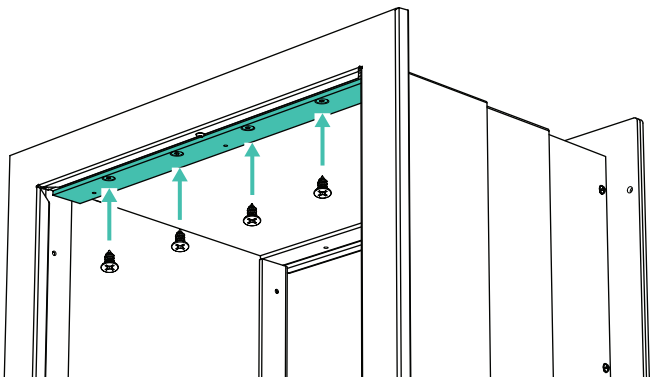


Step 3


Poisition the mounting bracket/flap assembly (item 1) into the tunnel opening so that the holes on the top of the mounting bracket face inward and align with the holes on the adapter plate on the ceiling of the tunnel.

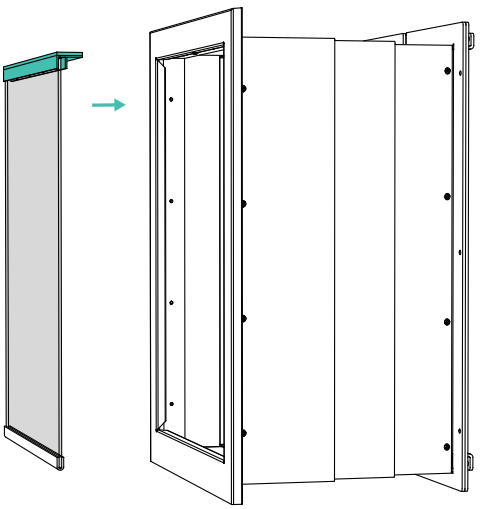

Step 4

Use the M3 x 6 mm screws (item 3) to secure the mounting bracket/flap assembly to the adapter plate.

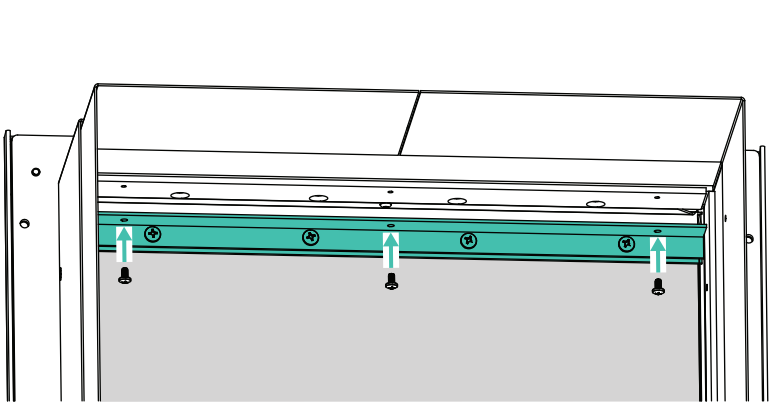

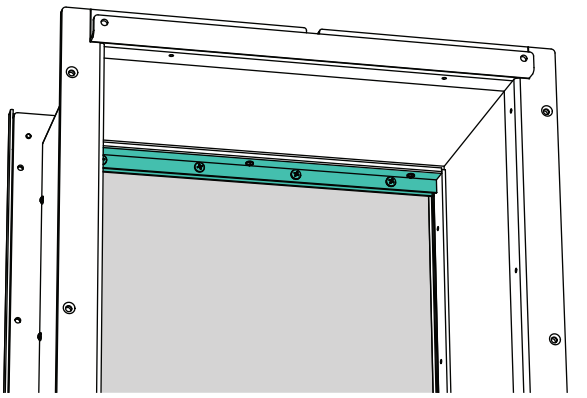

The information contained herein is protected by copyright. All rights reserved.